


## MIRROR FIXING INSTRUCTIONS

IF AT ALL UNSURE ABOUT FIXING YOUR MIRROR, THEN PLEASE SEEK THE ADVICE OF AN COMPETENT DIY PERSON OR CONTACT SOULMIRRORS FOR EXPLICIT INSTRUCTIONS.

IT IS RECCOMENDED THAT TWO PEOPLE SHOULD BE PRESENT WHEN FIXING MIRRORS. WHEN FIXING THE MIRROR TO A WALL OF STONE, BRICK, OR BREEZE-BLOCK YOU MUST USE THE WALL PLUGS AND SCREWS PROVIDED WITH YOUR MIRROR. IF THE WALL IS PLASTERBOARD, CAVITY OR FIBRE TYPE, APPROPRIATE WALL FIXINGS MUST BE USED (NOT SUPPLIED.)


### STARDROP AND TEARDROP FIXING

WHEN FITTING THE STAR OR TEARDROP MIRROR, DRILL TWO LOWER HOLES (5mm drill) INTO THE WALL 400mm FROM HOLE CENTRE TO HOLE CENTRE. THEN FROM THE CENTRE POINT OF THAT BASE LINE, VERTICALLY 550mm (Stardrop) OR 565mm (Teardrop) AS PER THE DRAWING BELOW. INSERT WALL PLUGS (SUPPLIED) AND THEN SCREW THE TWO LOWER MOUNTS FIRST TO THE WALL (DO NOT OVERTIGHTEN) INSERT THE MIRROR CAREFULLY INTO THE MOUNTS AND WHILST HOLDING THE MIRROR IN POSITION FIT THE TOP MOUNT. SCREW ON THE CHROME CAPS FINGER-TIGHT.

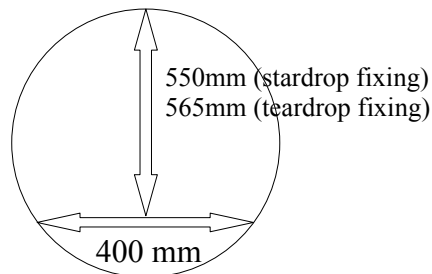

### FIXING INSTRUCTIONS FOR THE WEDGIE-BACKFIX

ONCE THE MIRROR LOCATION HAS BEEN CHOSEN, MARK THE MIRROR CENTRE-POINT ON THE WALL WITH A PENCIL. NOW MEASURE A SECOND POINT 65MM VERTICALLY DOWN FROM THIS POINT AND DRILL A 6MM HOLE APPROX 50MM DEEP TO FIT THE RAWL-PLUG. INSERT THE RAWL-PLUG AND LOOSELY SCREW THE WEDGE IN PLACE THE COUNTERSUNK HOLES FACING YOU. USE THE WEDGE TO MARK THE SECOND HOLE AND DRILL ANOTHER 6MM HOLE. SWING THE WEDGE TO ONE SIDE ENOUGH TO INSERT THE SECOND RAWL-PLUG AND SECURE THE WEDGE BY TIGHTENING THE SCREWS. NOW LAY THE MIRROR GENTLY IN PLACE ON THE WEDGE LETTING THE MIRROR SETTLE UNDER ITS OWN WEIGHT. TO REMOVE THE MIRROR; LIFT THE MIRROR CAREFULLY UP AT LEAST 50MM AND EASE IT AWAY FROM THE WALL.

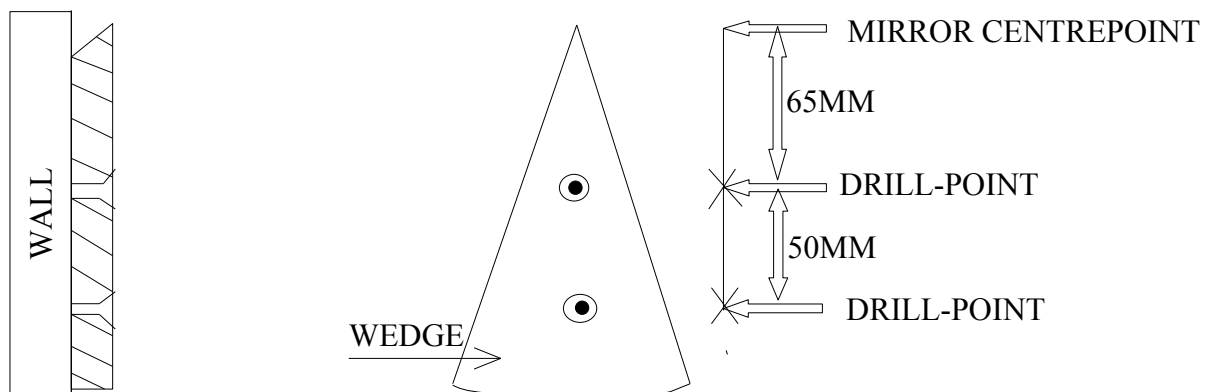

CLEAN YOUR MIRROR ONLY WITH A SOFT DUSTER DO NOT USE ABRASIVE SUBSTANCES AS THESE MAY DAMAGE YOUR MIRROR SURFACE